

				ACTIVATOR				
LEVEL	MODEL	AUTOMATIC	MANUAL	UML	H.R.	HAMMAR	CODE	
150	ANTARES ST 150 WITHOUT SAFETY BELT	.		.			L0160P01	
					.		L0160P03	
						.	L0160P04	
			.		.			L0160P02
						.		L0160P05
							.	L0160P07
	ANTARES ST 150 WITH SAFETY BELT	.		.			L0160P15	
					.		L0160P17	
						.	L0160P18	
			.		.			L0160P09
						.		L0160P10
							.	L0160P11
	ANTARES EXTREME 150 WITHOUT SAFETY BELT	.		.			L0160P21	
					.		L0160P22	
						.	L0160P23	
		.		.			L0160P24	
					.		L0160P25	
						.	L0160P26	
275	ANTARES ST 275 WITHOUT SAFETY BELT	.		.			L0160P40	
					.		L0160P41	
						.	L0160P42	
	ANTARES ST 275 WITH SAFETY BELT	.		.			L0160P43	
					.		L0160P44	
					.	L0160P45		